

Fig. 1

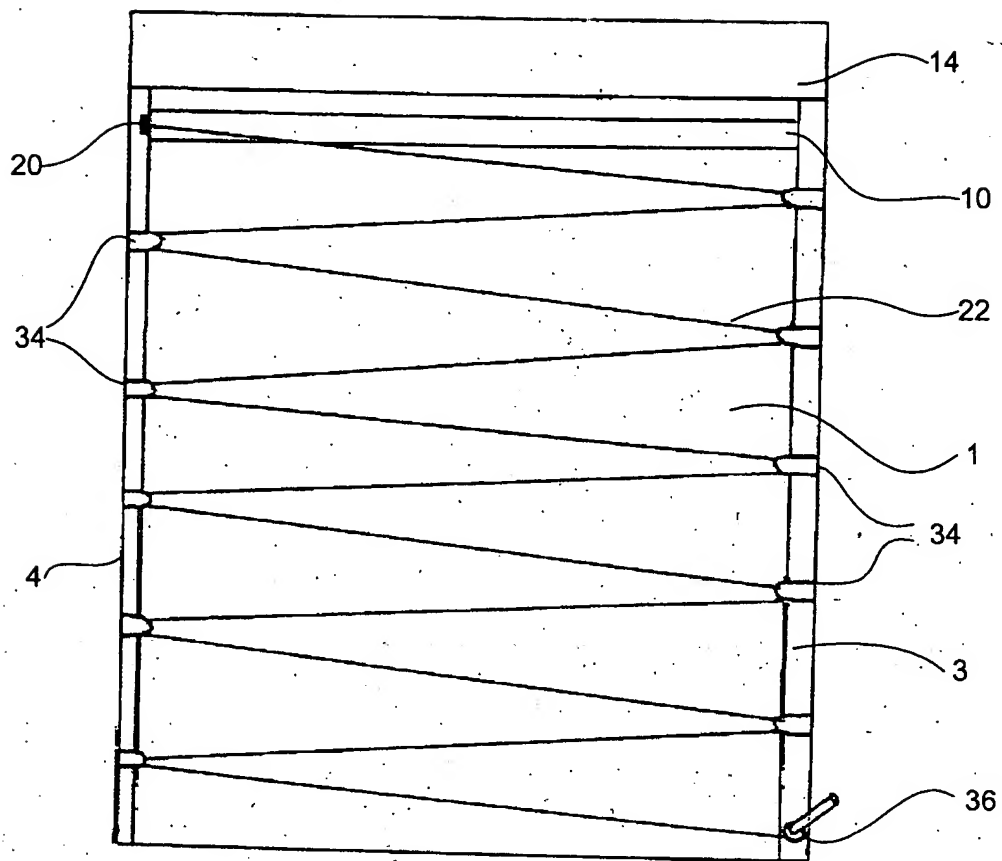


Fig. 2

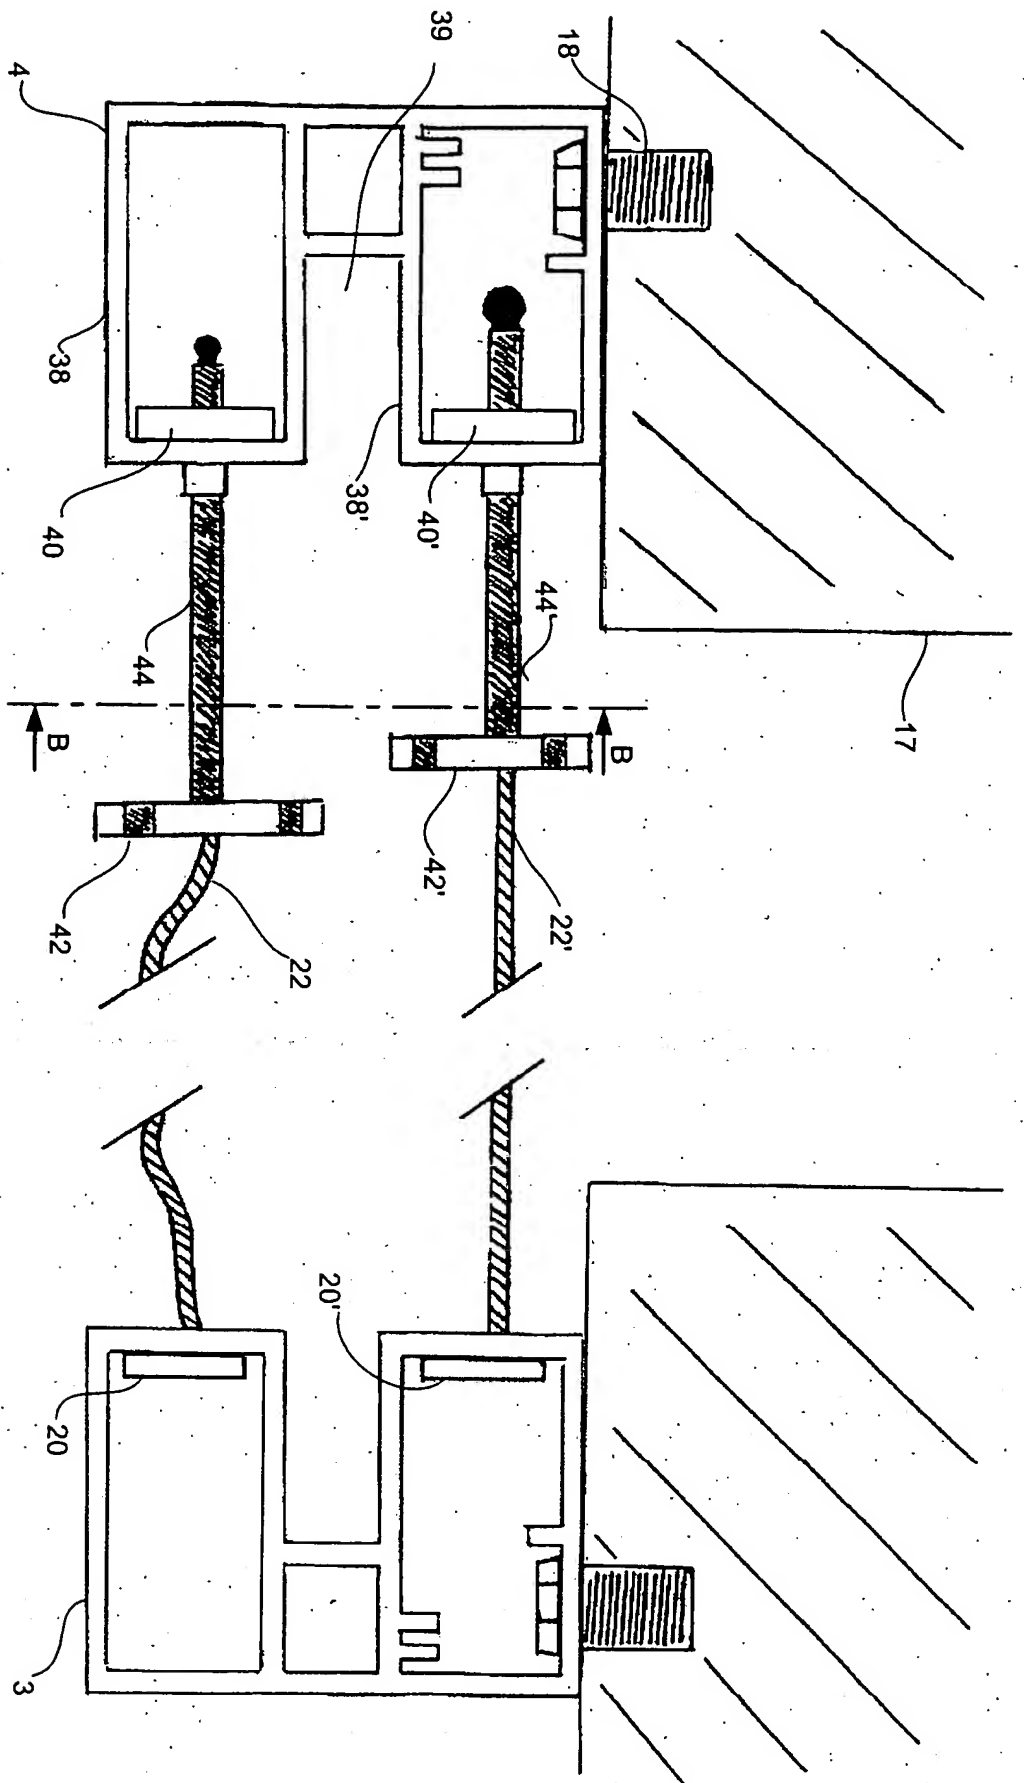
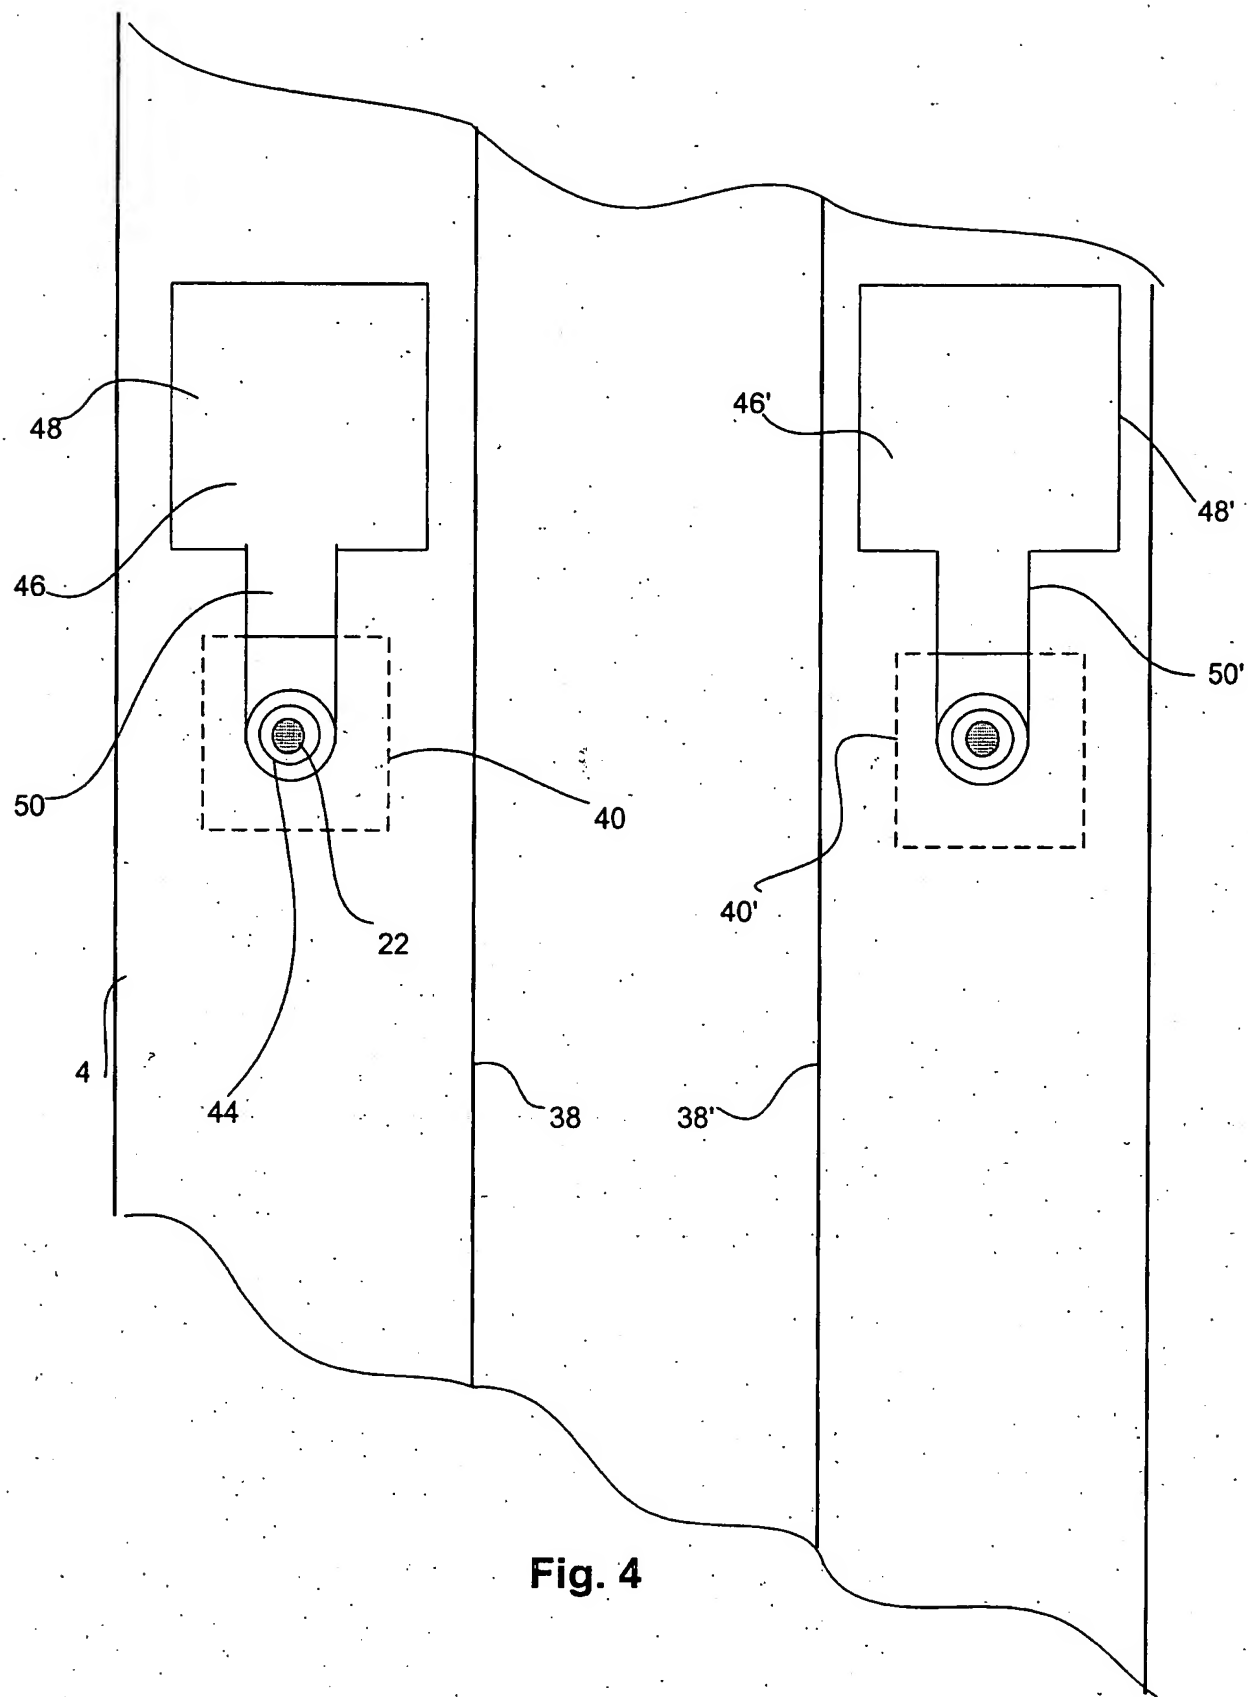


Fig. 3



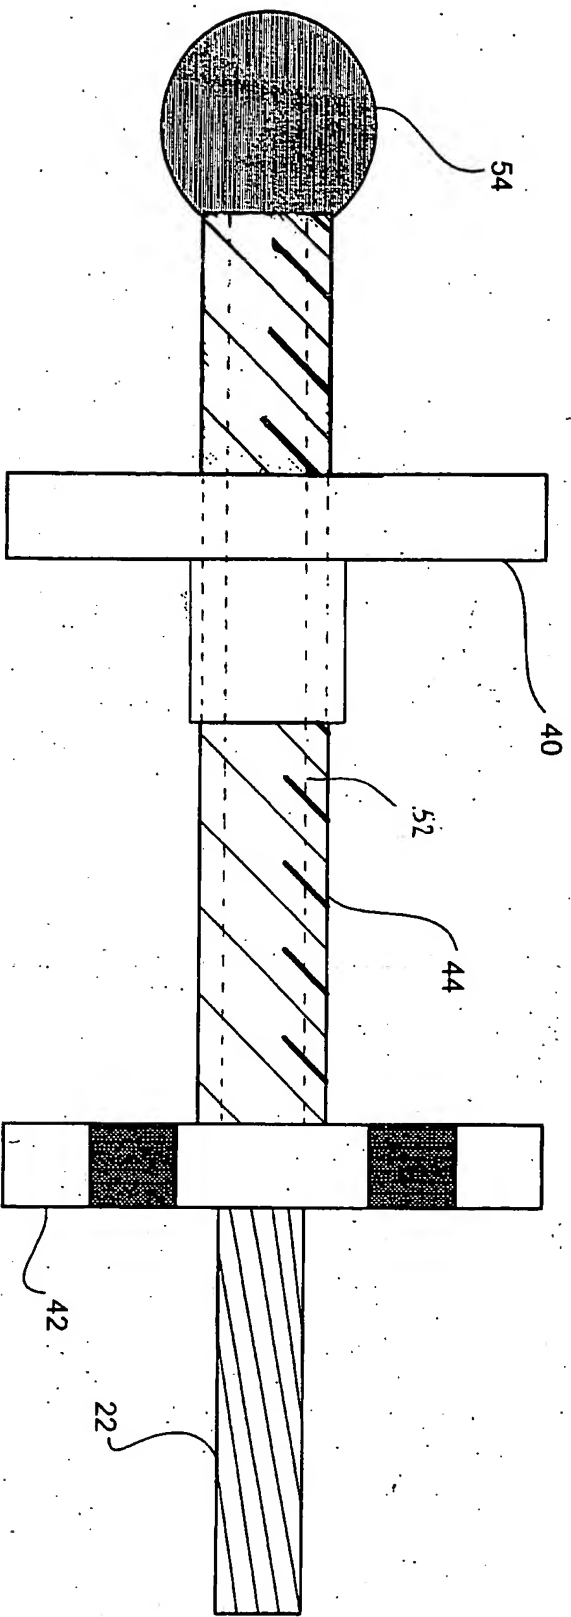


Fig. 5

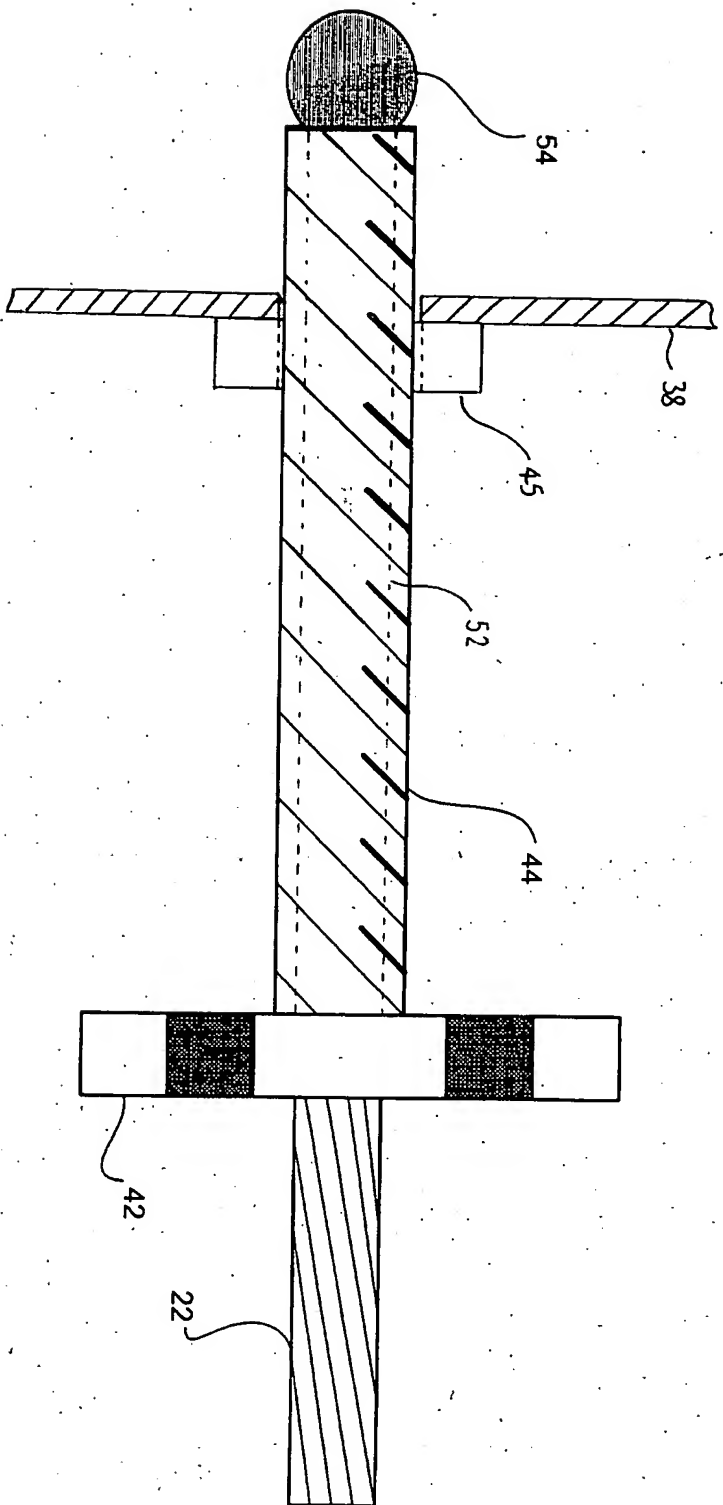


Fig. 5B

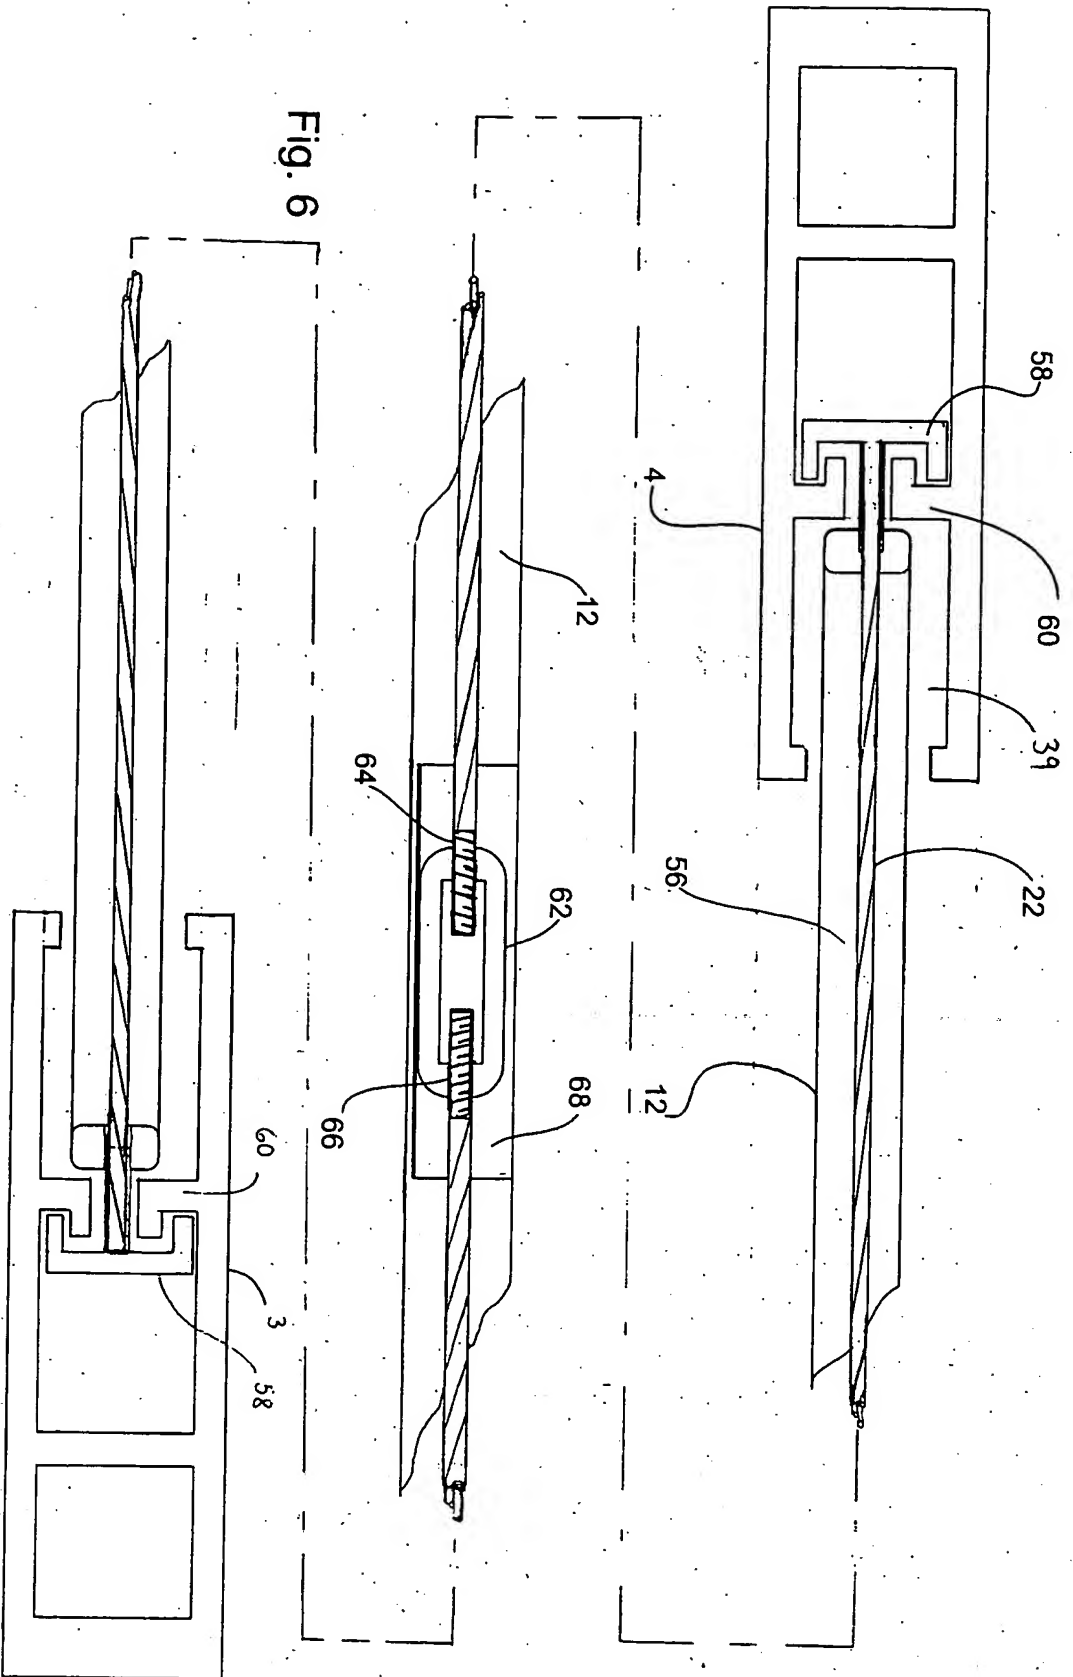


Fig. 6

Fig 7

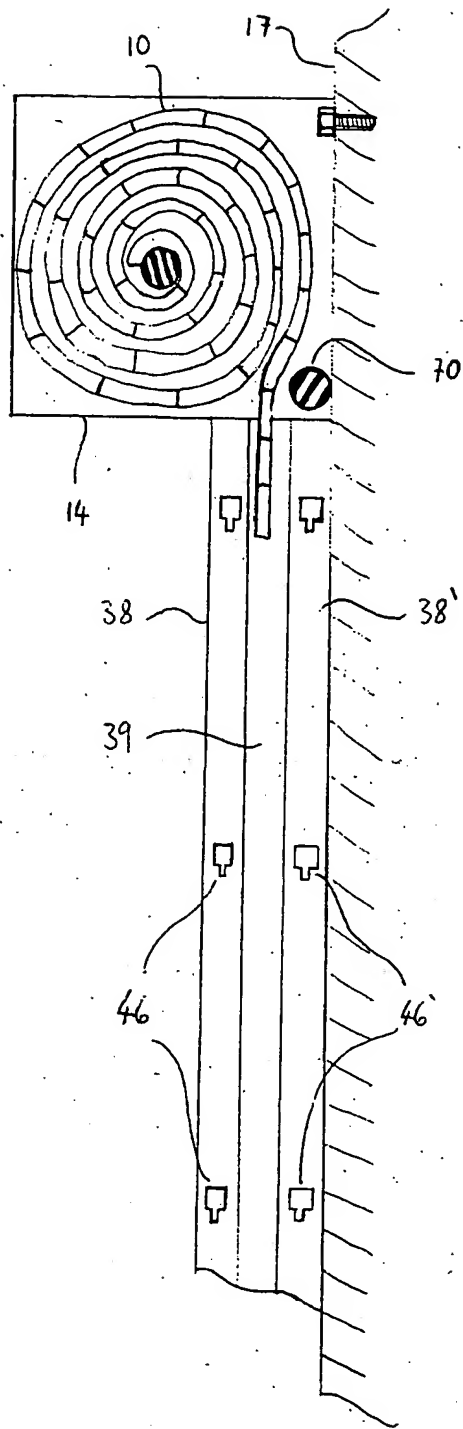


Fig 8

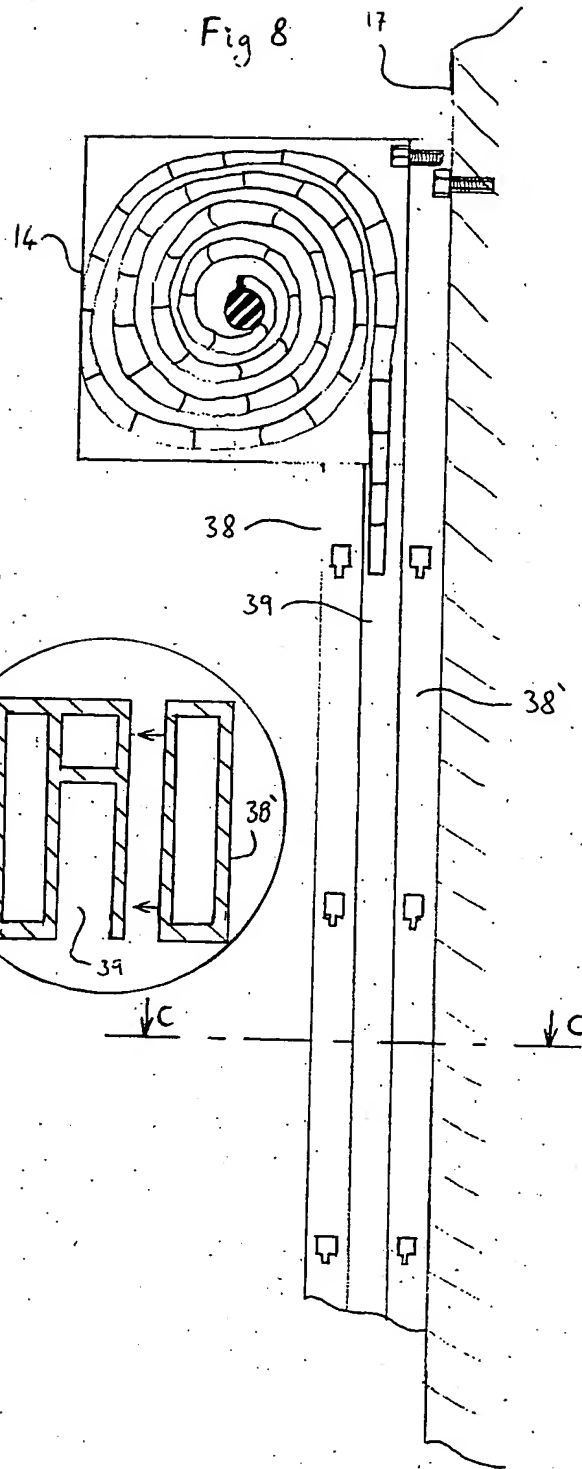
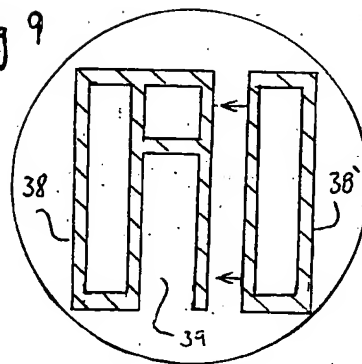


Fig 9





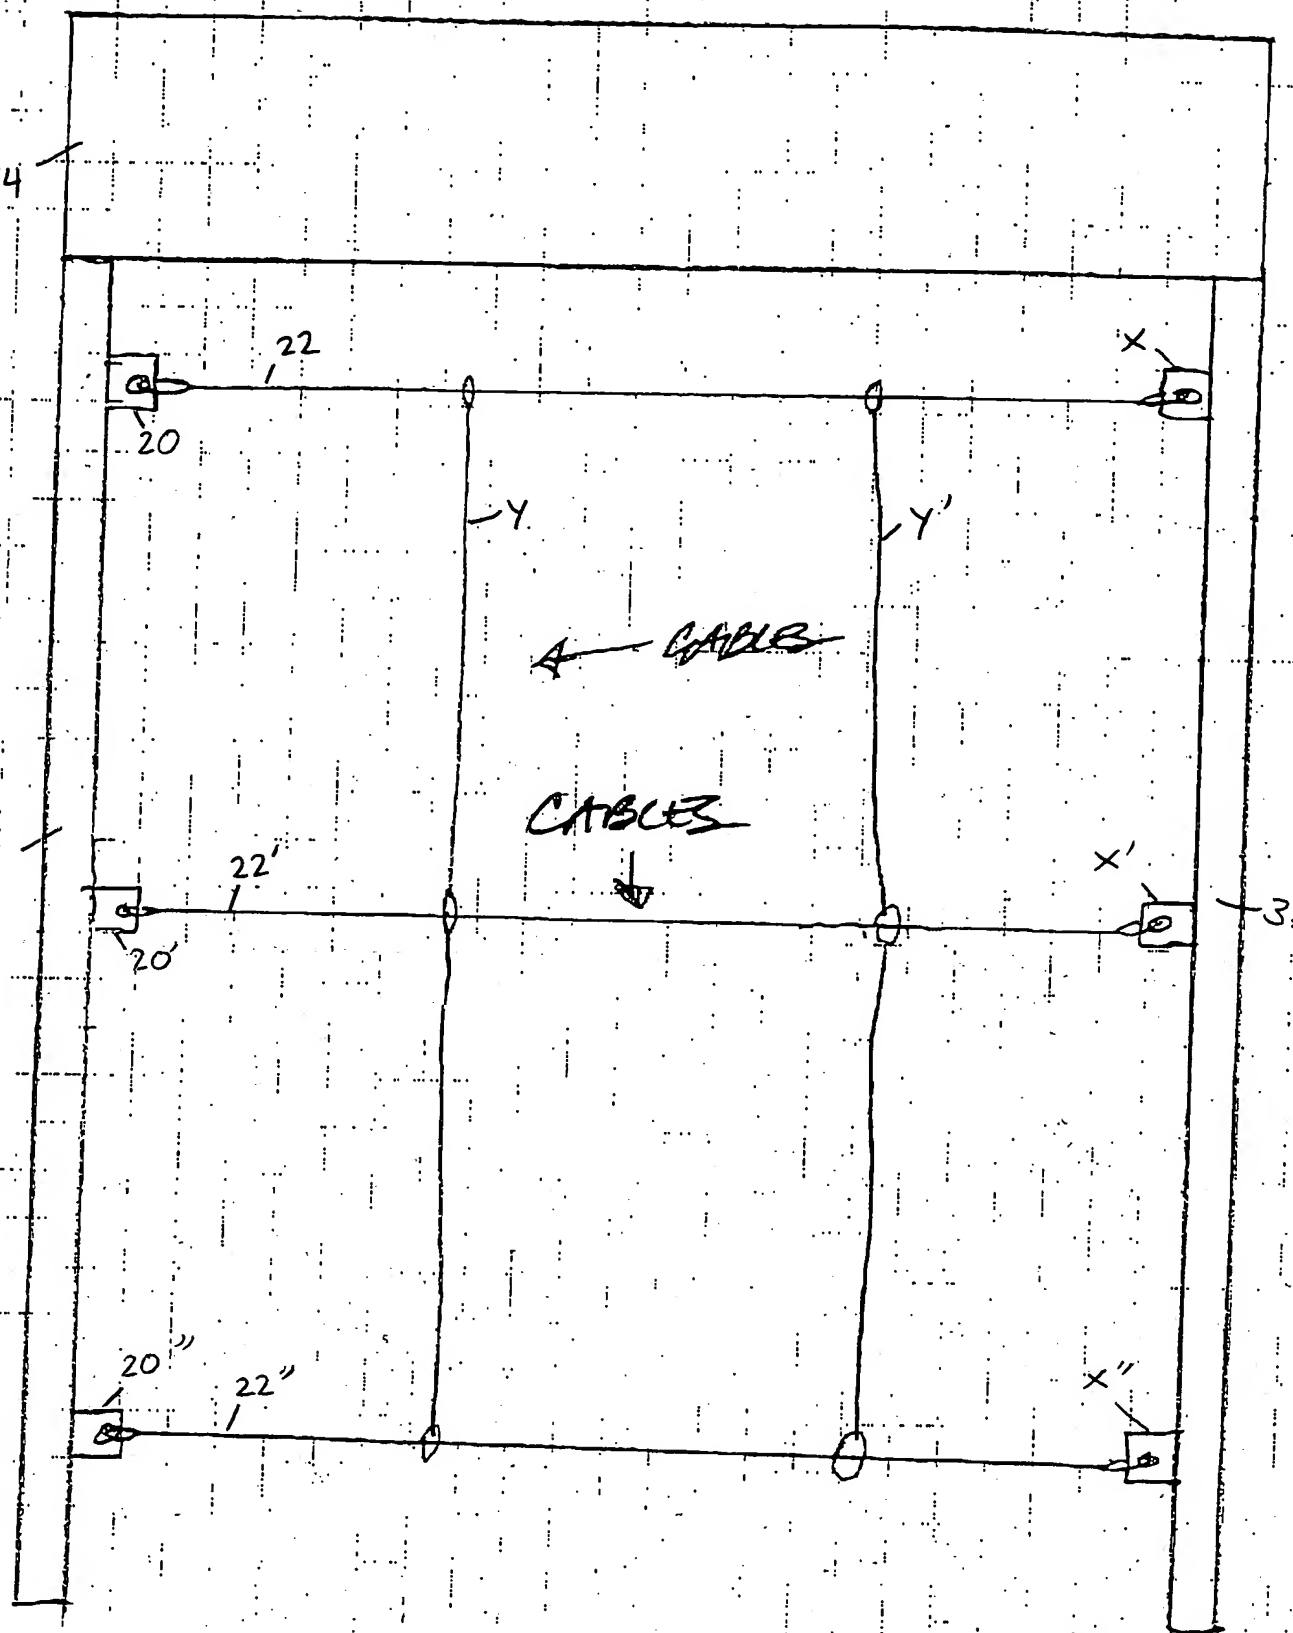


Fig 10.

①

(COULD ALSO BE USED AS  
SAME ATTACHMENT  
FOR CROSSING  
CABLES INTO  
WALL)


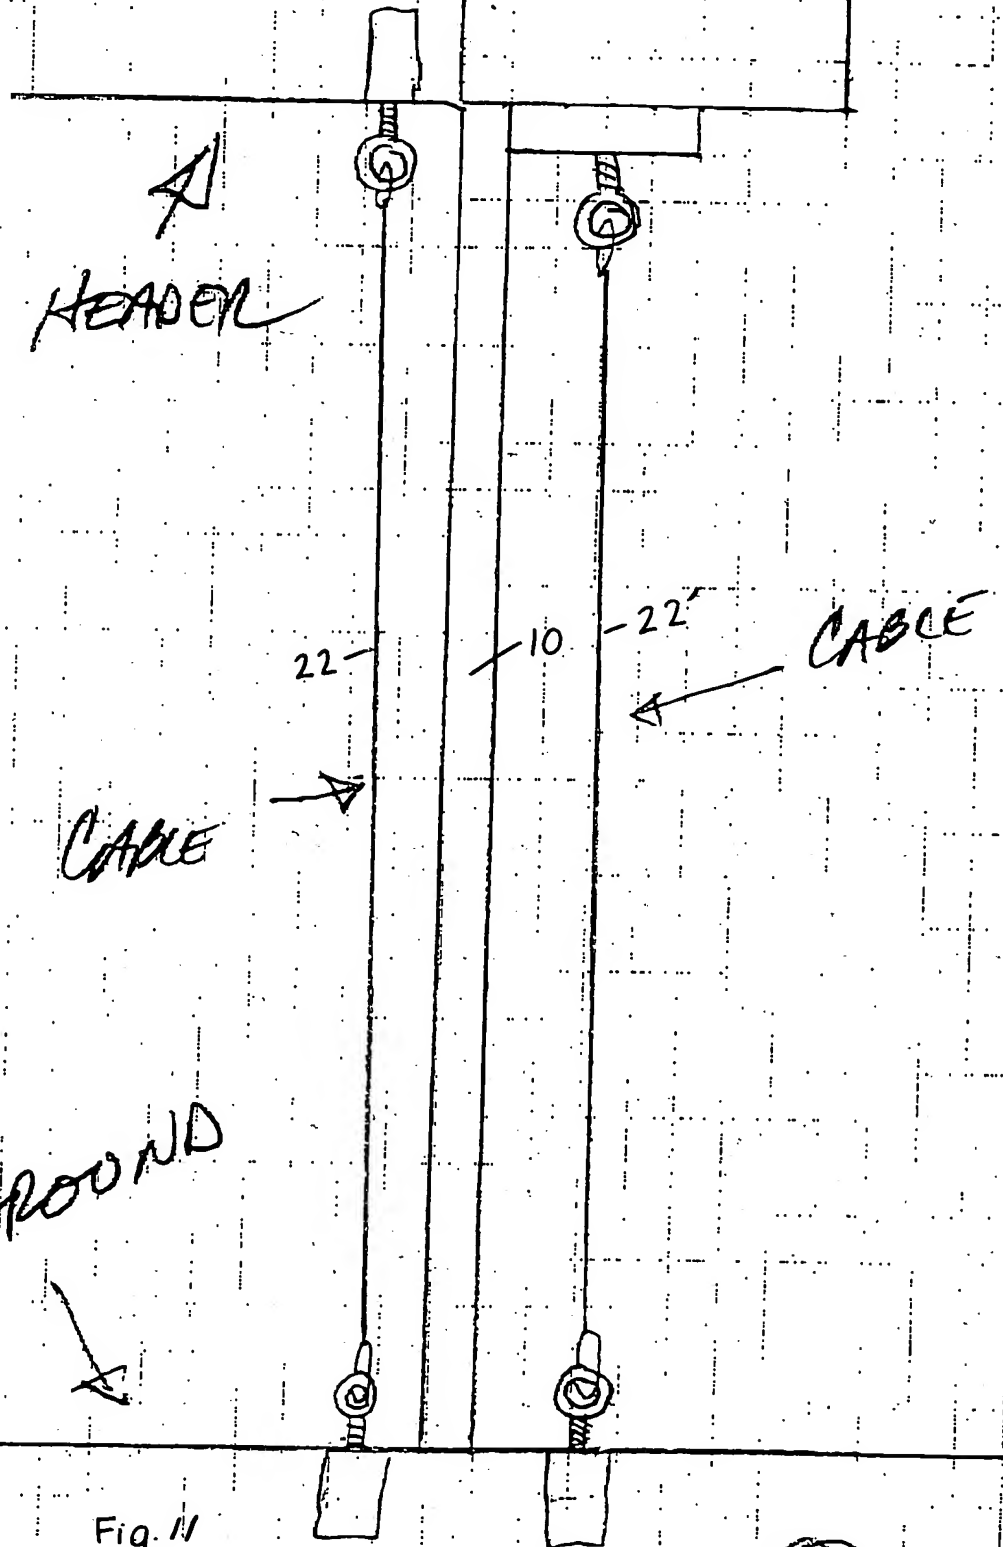


Fig. 11

2

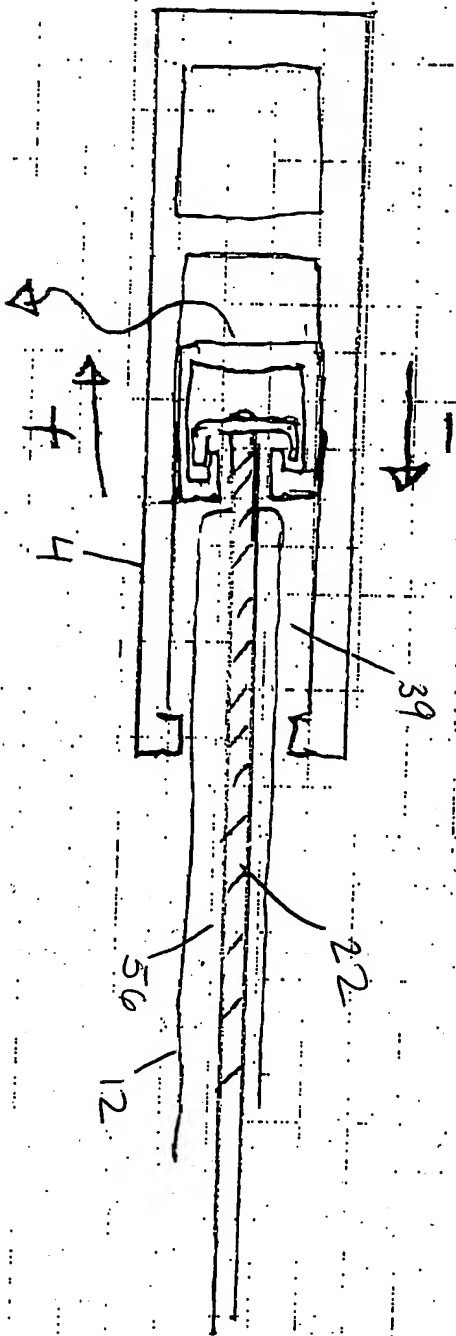

MOVES  
TO  
ADD TENSION

3

Fig. 12

NO PRESSURE

PRESSURE

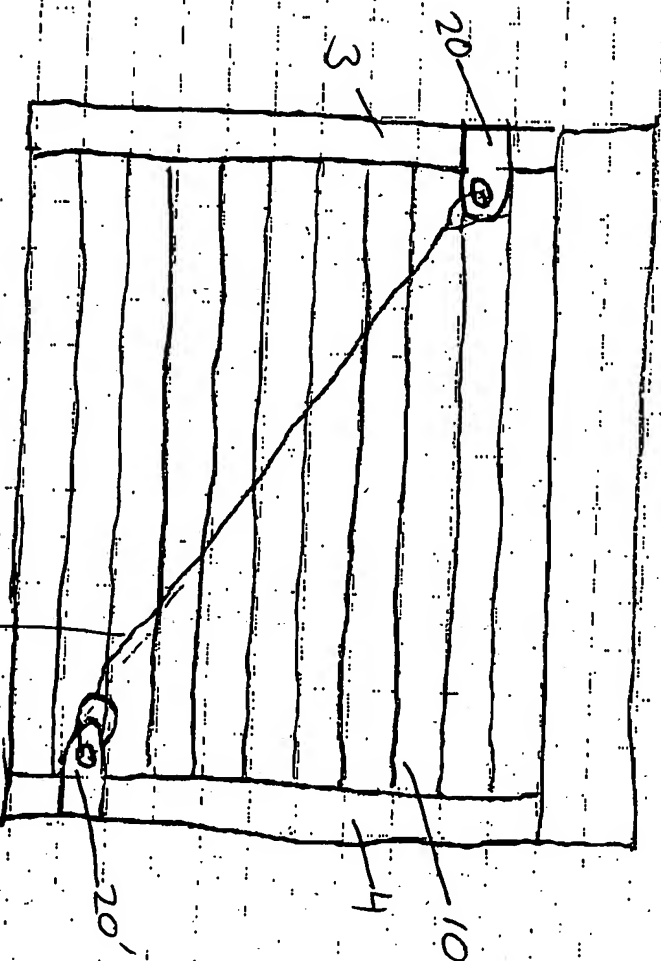
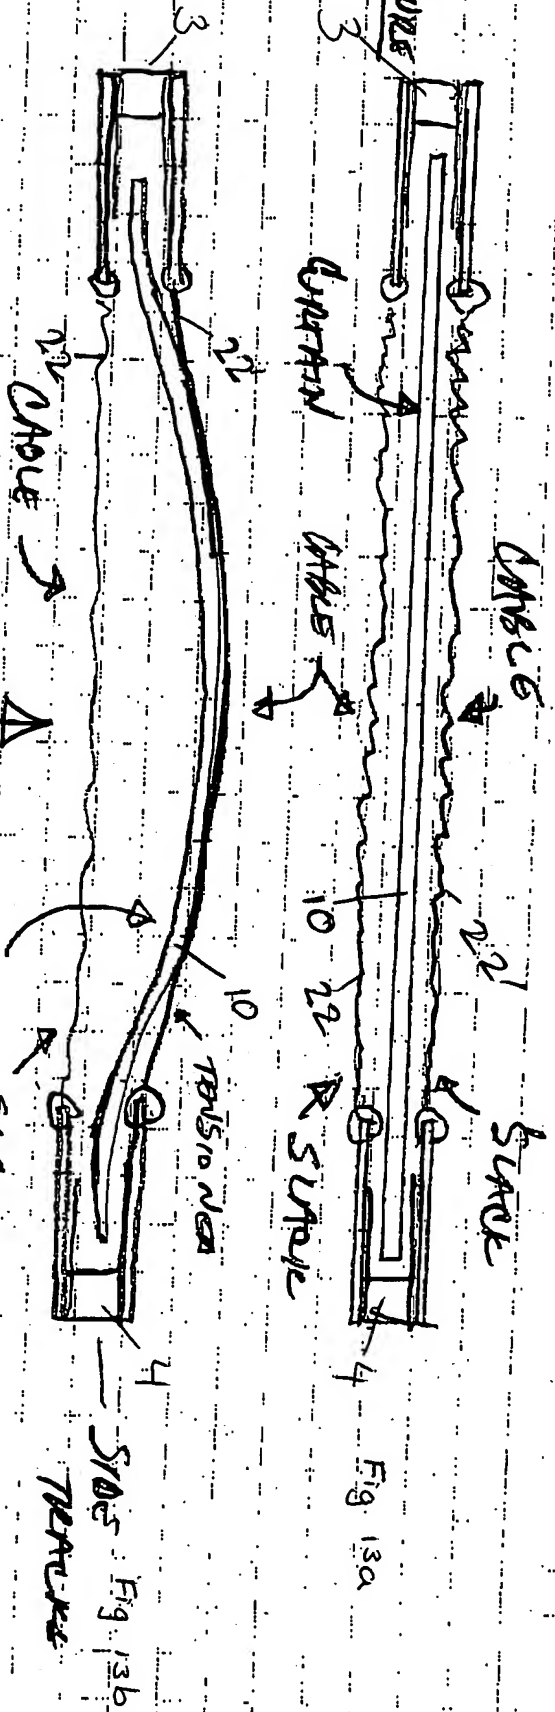


Fig. 13 22

NO ADDITIONAL

TENSION DEVICES

REQUIRED!

PLY WOOD PANEL (6'x6')

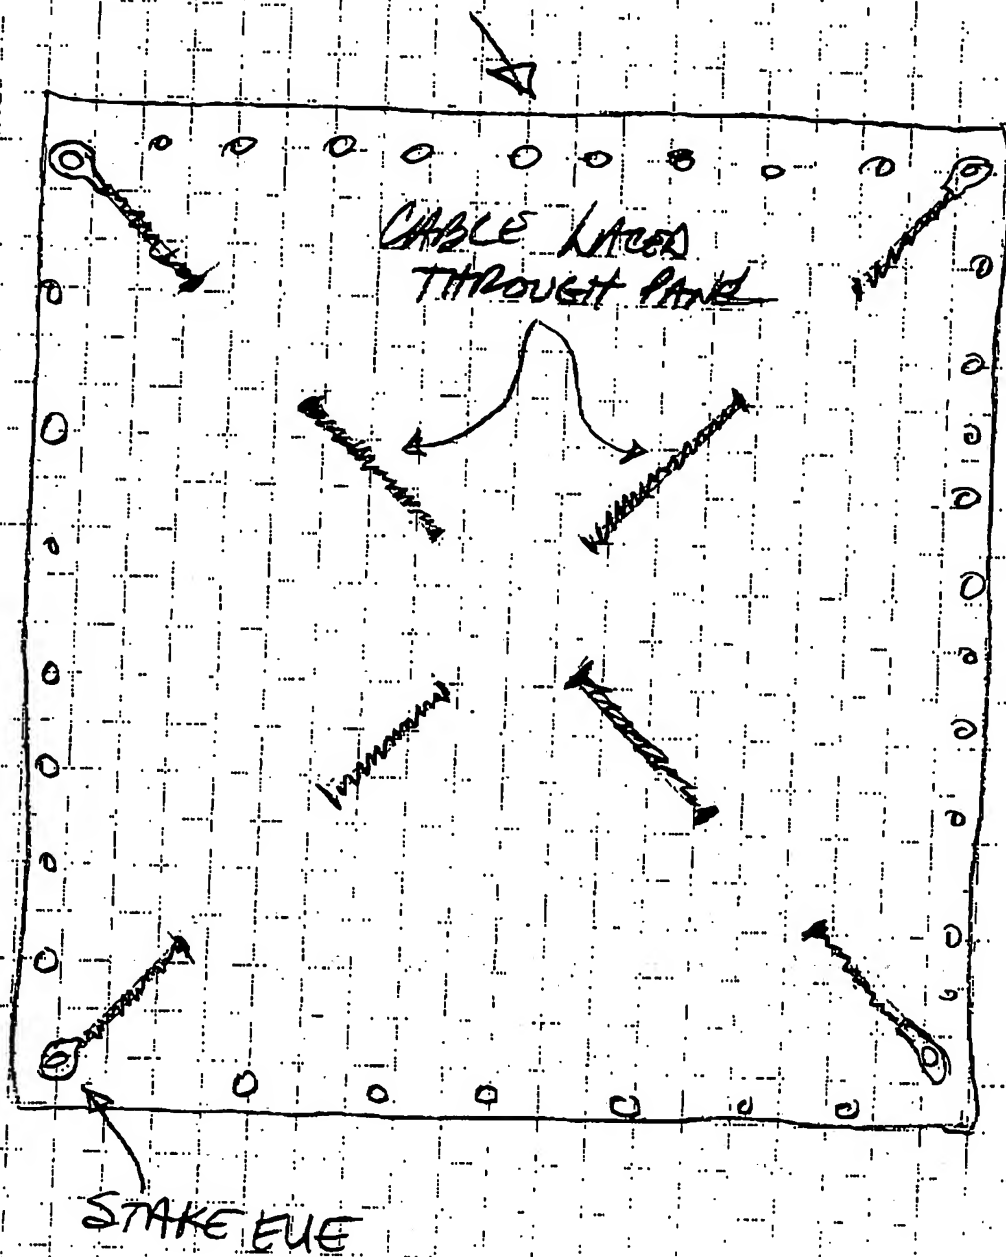


Fig. 14